

Important Fitment Advice

How to reclaim the magnetic ABS sensor ring from rear brake discs.

Removal	Refitment
<p>When pulling the old disc off the axle, take care not to put it down inboard side first, this will damage the ring. Place on a bench as shown in the picture below.</p> <p>Using a flat blade screwdriver, gently lever the sensor ring off the disc. Gradually work round the disc using even pressure.</p>	<p>To fit the sensor ring to the new disc, use a block of wood and a light mallet. Apply even pressure all the way round until the sensor ring is in place.</p> <p>Fit the disc and tighten nut to o/e manufacturers specification.</p>

