




## Replacing SAC design clutch with conventional aftermarket replacement.

The enclosed parts differ in appearance to the original equipment design.

### Original clutch design



### Aftermarket clutch design

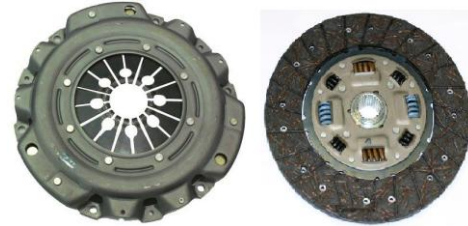

We have carried out stringent testing and evaluation to ensure the units are suitable alternatives.



## Dual mass flywheel identification on Mercedes Sprinter

Due to o/e design changes, there are two different depth flywheels fitted between 2000 -> 2004.

### 7.9mm depth flywheel- This clutch kit is suitable



Cut-outs around the cover bolting area and the flywheel depth from the clutch bolting surface is 7.9mm

### 11.9mm depth flywheel - This clutch kit is not suitable



No cut-outs around the cover bolting area and the flywheel depth from the clutch bolting surface is 11.9mm